MULTI-PURPOSE LINES OF COMMUNICATION SCANNING & TESTING DEVICE

INSTRUCTION MANUAL

TM-9



Your wire finder expert





Telephone wire finding function

TM-9

Network wire finding function

TM-9







- 1, Directly insert telephone wire with RJ11 plug into the RJ11 socket of the wire tracker's emitter; 2. Push DIP switch of emitter to position of "SCAN" then wire finding indicator.
- "STATUS" flashes meaning normal work of emitter
- 3. Press downward the inching button, use the probe of receiver to find target wire at the other end; 4. During testing, function switchover button can be pressed for switchover of dual-tone





CASE





Find it with receiver at the other end



Connect emitter with port of telephone wire to be found



Find it with receiver at the other end







- 1. Directly insert network wire with RJ45 plug into the RJ45 socket of the wire tracker's emitter; 2. Push DIP switch of emitter to position of "SCAN" then wire finding indicator "STATUS" flashes meaning normal work of emitter;
- 3. Press downward the inching button, use the probe of receiver to find target wire at the other end; 4. During testing, function switchover button can be pressed for switchover of dual-tone.

y find the target wire from among plenty of

network WIFE

CASE





network wire to be found







Connect emitter with port of network wire to be found



Compare the volume of the "tout" sound and the brightness of the signal indicator. Then you can find the target wire which has the highest volume and brightest indicator.

Compare the volume of the "tout" sound and the brightness of the signal indicator. Then you can find the target wire which has the highest volume and brightest indicator.

Electric wire finding function

TM-9







- 1. Directly insert telephone wire with crococile clamp and RJ11 plug into the RJ11 socket



Network wire

Collation function



position of "TEST", testing indicator "VERIFY" flashes meaning normal work of emitter 3. According to 16 wire sequences, judge the

characteristics of short-circuit, breaking circuit. open circuit and crossing. 4. During testing, function switchover button can be pressed for switchover of fast and slow levels.



Note: The equipment is prohibited to be used on heavy-current wires

Support direct wire collation of operating switch



It can take place of cable tester

It can rapidly test open circuit/short circuit and crossing through the 16 status indicators. The test result is accurate and the result is displayed clearly and directly.



2. Push DIP switch of emitter to position of " SCAN" then wire finding indicator "STATUS"

3. Press downward the inching button, use the probe of receiver to find target wire at the



Note: The equipment is prohibited to be used on heavy-current wires





Connect emitter with electric wire to be found

There is no electric drill required!!!



Compare the volume of the "tout" sound and the brightness of the signal indicator. Then you can find the target wire which has the highest volume and brightest indicator.

Automatic scan mode, rapidly testing, it can test correspondingly double-twisted cables 1,2,3,4,5,6,7,8 and G,meanwile,can judge wrong connection,short circuit and opencircuit.

Others function

TM-9

Open circuit or short circuit testing function

Push DIP switch on emitter to position of "TEST", and long press function switchover button on emitter for 2 seconds, "VERIFY" indicator will change "flash" to "lighting" insert the crystal plug with crocodile clamp into RJ11, clamp the two ends to be tested with crocodile clamps, in case of short circuit, "1" -shape indicator of emitter will light status indicators: the lighter the indicator, the smaller the resistance: the darker the indicator, the bigger the resistance

DC level testing function

Push DIP switch on emitter to position of "SCAN", and long press function switchover button on emitter for 2 seconds, "STATUS" indicator will turn off and "VERIFY"

crocodile clamps, in case that "STATUS" indicator lights up in red . it means the end clamped with red clamp is positive pole, in case that "STATUS" indicator lights up in green, it means the end clamped with red clamp is negative pole, electric level can be judged by brightness of the status indicators; the lighter the indicator, the smaller the resistance; the darker the indicator, the bigger the resistance



Can test positive and nega tive pole of DC electric level

Low voltage alarm function

Push DIP switch on emitter to position of "SCAN", in case that battery level is lower than 6.0V. "STATUS" and "VERIEY" indicators will light up at the same time, it means battery replacement is needed.

Earphone function

In noisy environment, earphone can be used to prevent

Volume adjusting function

Spotlight function



Energy-saving

Inching switch can automatically delay power-off. The continuous lifespan of battery is over 50 hours



Applicable users

Applicable scope:

Telecom post bureau/net bar/telecom engineering companies / network engineering companies/power supply/ army and other departments requiring Wire engineering of telecom network and regular maintenance work; network line engineering of computer; other wire engineering and maintenance.

Specification of product

Item	Specification Wire tracker	
Product name		
Power supply	DC, 9V battery	
The max working current	Emitter	≤10mA
	Receiver	≤30mA
Signal transmission format	Multi-frequency impulse	
Signal output electric status	8Vp-p	
Distance of signal transmission	≥3km	
	Emitter	126 X 49 X 34,mm
Appearance dimension	Receiver	175 X 42 X 27, mm
	Whole set	270 X 165 X 45,mm
	Emitter	0.060kg
Weight	Receiver	0.072kg
	Whole set	0.420kg

The list of package

1. Emitter	1 piece	6. Cable with crocodile clamp	1 piece
2. Receiver	1 piece	7. RJ45 network cable	1 piece
3. 9V battery	2 pieces	8. Instruction manual	1 piece
4. Earphone	1 piece	9. Toolkit	1 piece
5. RJ11 telephone cable	1 piece	10. Color box	1 piece