
 


INSTALLATION SHEET

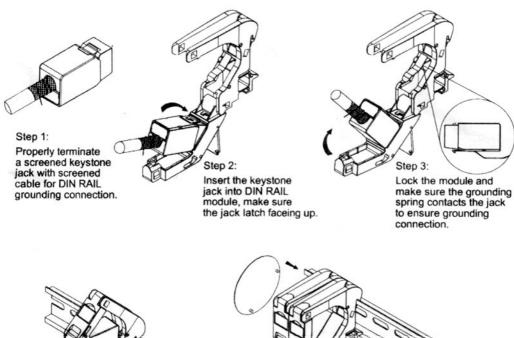




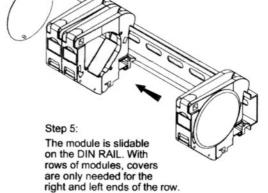

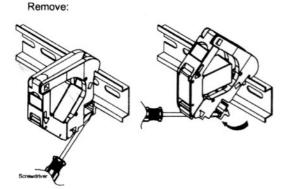

Insert a screwdriver into the opening at the bottom of the module and use it as a lever to pull out the module.

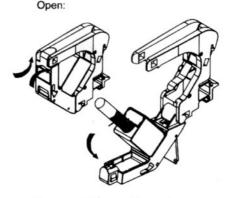

Use screwdrivers or fingers to open the poles at the top of the module.