




# Installation Instruction for Junction Box CAT 7, 600 MHz


## 1 Preparing the cable

Remove approx. 50 mm of the cable sheath. Put the wire braid back and short it to approx. 15 mm.



## 2 Organize the cable



Remove the foil shield of the conductor pairings to at least approx. 15 mm. Push the cable all the way up to the notch and arrange it according to the description (wiring configurations acc. to T568 B).

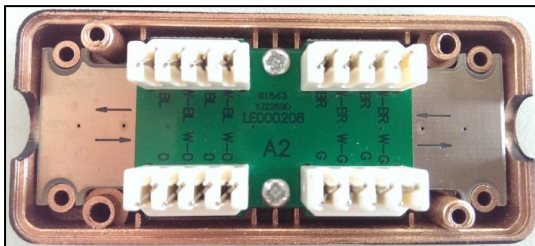

Wiring configurations labeled inside of the housing.

## 3 Fixing the cable and connecting the wires

Fixe the cable with the cable fixing clamp by screwing and press the wires into the LSA blocks with help of the LSA Punch Down Tool.

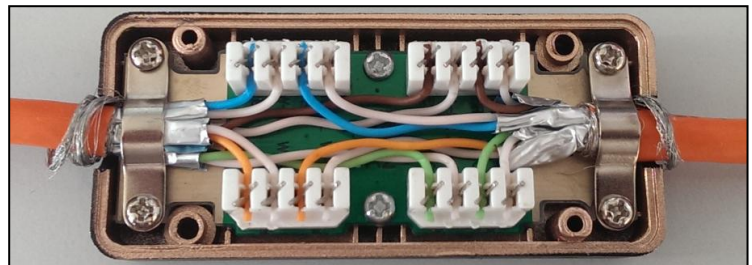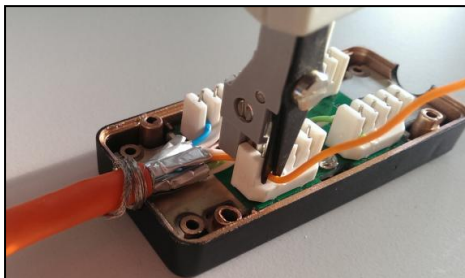

## 4 Connecting of the opposite side & finishing of the installation

Repeat steps 1-3 for the other cable side. Same color pairs per block (1:1).  
Put the top cover on the bottom and screw it hand-tight.

### Disassembly

The disassembly is made in 3 easy steps: Loosen the screws and take off the top cover, loosen the cable fixing clamp and remove the wires by using the wire remove hook of the LSA Punch Down Tool.

**Please note:** The Junction Box is suitable for wall mounting. Just mount the bottom cover on the wall with help of the rear recesses, before installing the cable.