



# Surface Mounted Box

JE342 series


1

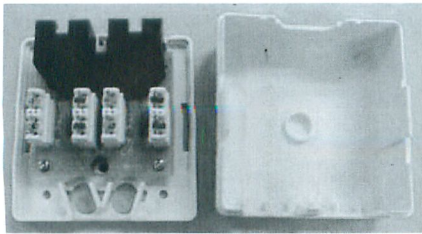

Unshielded

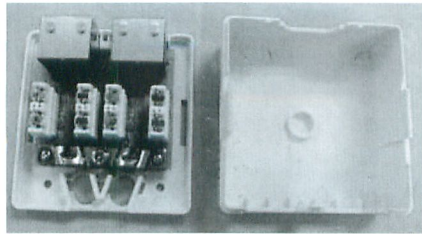


Half shielded

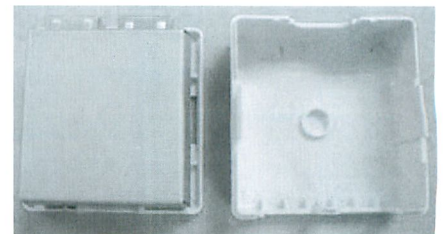


Full shielded

2

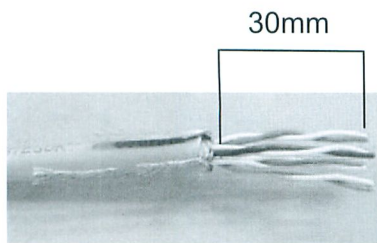

Strip approximately 30mm of the cable jacket, and separate the wires into 4 pairs.

3

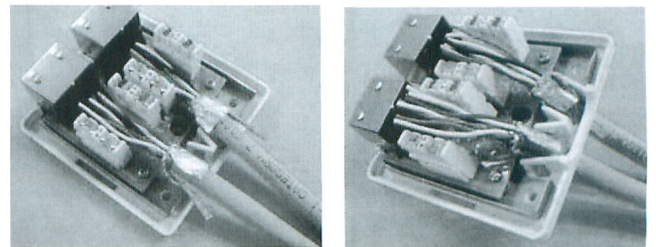

JE342 series provides two entrances for cables, please pre-insert the cables before installation.

4

## T568A


Pin 1 White/Green  
Pin 2 Green  
Pin 3 White/Orange  
Pin 4 Blue  
Pin 5 White/Blue  
Pin 6 Orange  
Pin 7 White/Brown  
Pin 8 Brown

## T568B

Pin 1 White/orange  
Pin 2 Orange  
Pin 3 White/Green  
Pin 4 Blue  
Pin 5 White/Blue  
Pin 6 Green  
Pin 7 White/Brown  
Pin 8 Brown


Complete wiring instruction for T568A & T568B.

5

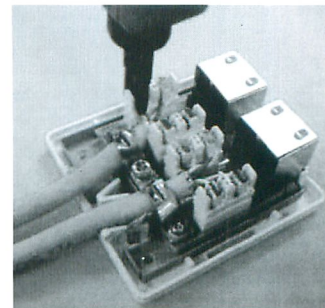


Follow the wiring instruction and IDC color-coding to punch the wires by 110 or KRONE punching tool.

6

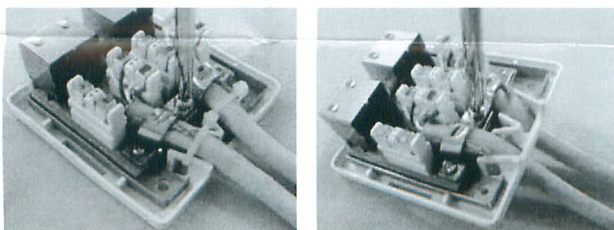

Fasten the cable holder and make sure the foil or braid shield makes contact with the cable holder.

7

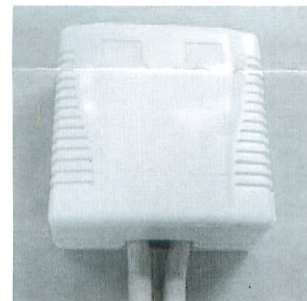

Place the upper cover to complete the installation.